



Front Panel of the Monitor

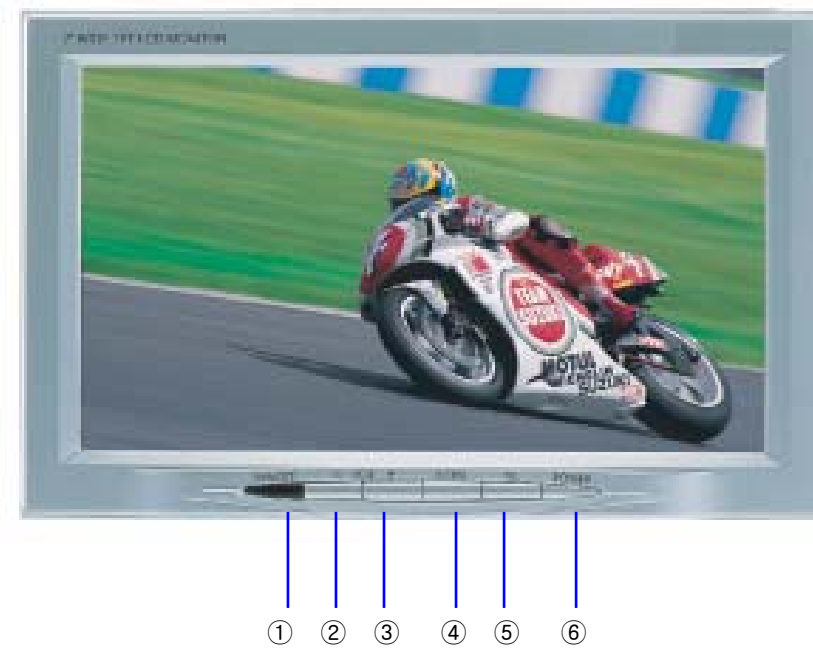


- ① Receiver for Remote Controller
- ② ▼ Button: Press to change menu values
- ③ ▲ Button: Press to change menu values
- ④ SEL Button: Press to navigate the menu items
- ⑤ MENU Button: Press to display the OSD Menu (PICTURE-FUNCTION-PICTURE)
- ⑥ Power On/Off Switch

Remote Controller

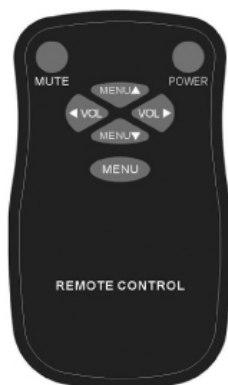


- ① MUTE Button: Press to temporarily cut off the sound
- ② POWER Button: Power On/Off
- ③ MENU Button: Press to display the OSD menu (PICTURE-FUNCTION-PICTURE)
- ④ VOL ◀▶ Button: Press to change menu values
- ⑤ MENU ▼▲ Button: Press to navigate the menu items

INSTALLATION

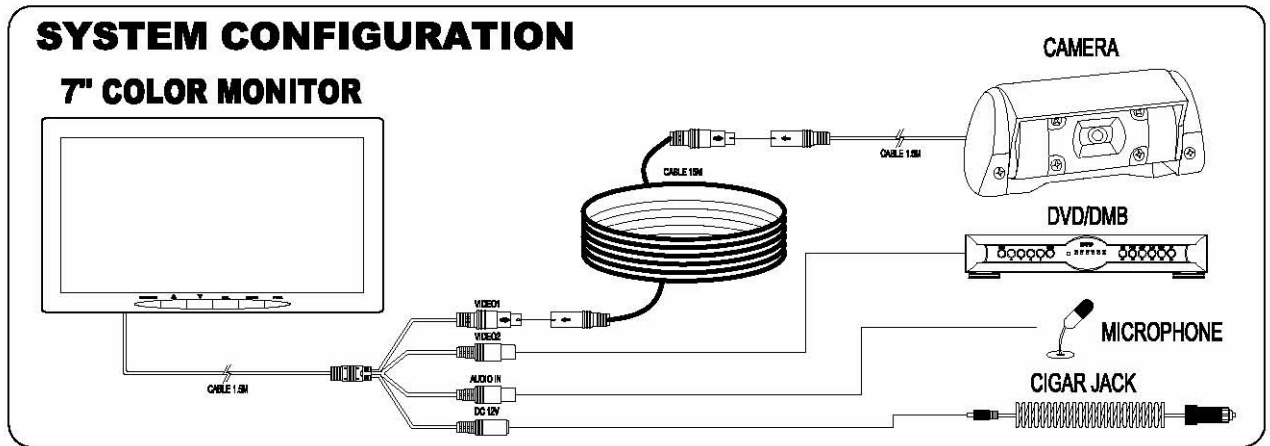

Installation of the Camera

※ HOW TO DISASSEMBLE A CAMERA ※

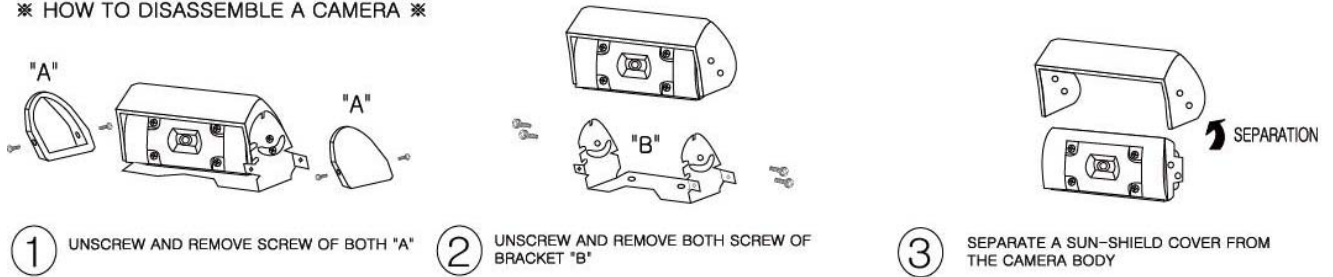

※ HOW TO ASSEMBLE A CAMERA ※

