

T900 Dual Micro Cassette Recorder

Cell Phone Recorder guide

Installing the batteries:

- 1-Press down the battery compartment cover and slide it off
- 2-Install 2 AA batteries observing the polarity inside the battery compartment
- 3-Replace the battery compartment cover.

Note: If play back is distorted or the tape moves slowly, replace the batteries. The REC/BATT Indicator will be brightly lit when fresh batteries are installed.

Loading a micro cassette:

- 1-Press the Stop/Eject button to open the cassette compartment.
- 2-Load the micro cassette with the side to be played or recorded facing up and the exposed tape faces out.
- 3-Close the micro cassette compartment.

AC Adapter: (Not included)

An optional AC Adapter can be used to power the unit.

- 1-Insert the AC Adapters plug into the DC jack on the unit (#13), the internal batteries will automatically be disconnected.
- 2-Plug the AC Adapter into an AC wall outlet.

Recording:

Manual Recording

- 1-Set the VAS ON/OFF switch to off
- 2-Press the RECORD button , The PLAY button will also be locked down, recording will begin and the REC/BATT indicator will be lit up. Recording will continue until the STOP/EJECT button is pressed.

Voice Activated System (VAS) Recording

- 1-Set the VAS ON/OFF switch to ON
- 2-Press the RECORD button. The PLAY button will also be locked down.
- 3-Adjust the microphone sensitivity with the VOLUME/VAS SENS control until the sound source level activates the unit, recording will begin.

NOTES:

Before recording confirm the PAUSE ON/OFF switch is set to OFF.

The recording level is set automatically

Adjusting the VOLUME/VAS SENS control does not change the recording level

Press the STOP/EJECT button to stop recording.

VOLUME/VAS SENS CONTROL

When the unit is in playback mode, this control adjust the play-back volume level.

When the unit is in record mode, this control adjust the microphone sensitivity. At 10 (maximum) a soft sound can turn on the recorder. At 0 (minimum) a louder sound is required.

Tape Speed Control:

- 2.4-Normal Speed
- 1.2-Longer recording time



1-MIC Jack	9-Play
2-Ear Jack	10-Stop/Eject
3-Volume/VAS Sensor	11-Tape Speed
4-VAS On/Off	12-Rec/Batt Indicator
5-Built in microphone	13-DC in jack
6-Pause On/Off	14-Rec/battery indicator
7-Record	

To record a Cell Phone call.

Insert the plug into the Micro Cassette Cell Phone Recorder into the "MIC jack (#1)

Tuck the cushioned ear piece in your ear.

Follow instructions on how to record.



CC10

Play Back:

Set the Speed control to the same speed as the recording was made.

Load the micro cassette tape

Press the play button, adjust the volume.

Press the STOP/EJECT button to stop the tape.

Cue & Review:

To locate a specific portion of the tape during playback you can fast forward or rewind the tape by sliding and holding the REW/FF switch until the desired location is found.

Pause Control:

You can stop the recorder momentarily by sliding the switch to on to stop operation in PLAY, RECORD, FF/CUE or REW/REV modes. Slide the switch to off to resume the current operation.

T900 Dual Micro Cassette Recorder Telephone Recorder Guide

Installing the batteries:

- 1-Press down the battery compartment cover and slide it off
- 2-Install 2 AA batteries observing the polarity inside the battery compartment
- 3-Replace the battery compartment cover.

Note: If play back is distorted or the tape moves slowly, replace the batteries. The REC/BATT Indicator will be brightly lit when fresh batteries are installed.

Loading a micro cassette:

- 1-Press the Stop/Eject button to open the cassette compartment.
- 2-Load the micro cassette with the side to be played or recorded facing up and the exposed tape faces out.
- 3-Close the micro cassette compartment.

AC Adapter: (Not included)

An optional AC Adapter can be used to power the unit.

- 1-Insert the AC Adapters plug into the DC jack on the unit (#13), the internal batteries will automatically be disconnected.
- 2-Plug the AC Adapter into an AC wall outlet.

Recording:

Manual Recording

- 1-Set the VAS ON/OFF switch to off
- 2-Press the RECORD button , The PLAY button will also be locked down, recording will begin and the REC/BATT indicator will be lit up. Recording will continue until the STOP/EJECT button is pressed.

Voice Activated System (VAS) Recording

- 1-Set the VAS ON/OFF switch to ON
- 2-Press the RECORD button. The PLAY button will also be locked down.
- 3-Adjust the microphone sensitivity with the VOLUME/VAS SENS control until the sound source level activates the unit, recording will begin.

NOTES:

Before recording confirm the PAUSE ON/OFF switch is set to OFF. The recording level is set automatically
Adjusting the VOLUME/VAS SENS control does not change the recording level
Press the STOP/EJECT button to stop recording.

VOLUME/VAS SENS CONTROL

When the unit is in playback mode, this control adjust the playback volume level.

When the unit is in record mode, this control adjust the microphone sensitivity. At 10 (maximum) a soft sound can turn on the recorder. At 0 (minimum) a louder sound is required.

Tape Speed Control:


- 2.4-Normal Speed
- 1.2-Longer recording time



1-MIC Jack	9-Play
2-Ear Jack	10-Stop/Eject
3-Volume/VAS Sensor	11-Tape Speed
4-VAS On/Off	12-Rec/Batt Indicator
5-Built in microphone	13-DC in jack
6-Pause On/Off	14-Rec/battery indicator
7-Record	

To record a Telephone call.

Connect one end of the supplied CTRD cord into the Mic input on the recorder. (1)
Insert the other end of the CTRD cord into the supplied T adapter
Insert the T adapter into the telephone wall jack.
Insert the telephone cable from your phone into the T adapter.
The Micro Cassette Recorder is now ready to record. Follow instructions on how to Record Manual or VAS.

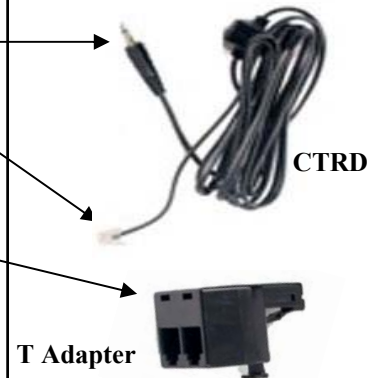

Play Back:

Set the Speed control to the same speed as the recording was made. Load the micro cassette tape
Press the play button, adjust the volume.

Press the STOP/EJECT button to stop the tape.

Cue & Review:

To locate a specific portion of the tape during playback you can fast forward or rewind the tape by sliding and holding the REW/FF switch until the desired location is found.

Pause Control:

You can stop the recorder momentarily by sliding the switch to on to stop operation in PLAY, RECORD, FF/CUE or REW/REV modes. Slide the switch to off to resume the current operation.