



For USB and USB Pro Recorders:

1. Install the software which was included with the unit.
2. **USB Cable**: Insert the USB cable (included) into an open USB port on the computer. Insert other side of USB cord into the USB Recorder Device. (Red USB Cable Shown Below)
3. **Handset Cord** : Remove coiled cord from your phones handset and plug the new cord which is included with the USB Recorder into your handset. Insert other side of cord to the USB Recorder device as shown below. (Handset Cable Shown Below in black).
4. **Phone Cord** :Insert the phone cord (which you freed from the handset) into USB Recorder Device. (Phone Cable Shown Below in white)

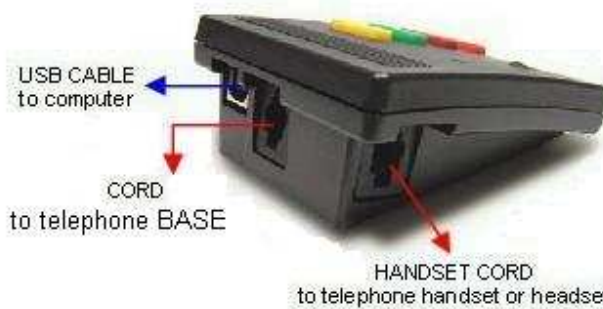

5.

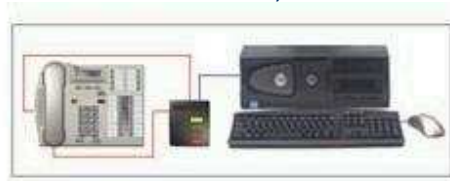

For Casper USB Line Recorder:

1. Install the software which was included with the unit.
2. **USB Cable:** Insert the USB cable (included) into an open USB port on the computer. Insert other side of USB cord into the USB Recorder Device. (Red USB Cable Shown above)
3. **Phone Cord:** Remove phone cord from back of the phone and insert into the back jack of the USB Line Recorder Device.
4. **2nd Phone Cord:** Insert one side of the phone cord (included) to side jack of the USB Line Recorder Device and the other side into the back of the phone.

